 




 

| Original | Substituto | Original | Substituto |
|---|------------|---|-----------------------------|
|  | Power |  | Power |
|  | Input TV |  | TV/Radio / |
|  | Input Av |  | AV / Input / RDS |
|  | Guide |  | Guide / EPG / -/-- |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [+]/Aspect |  | Picture / Format |

| Original | Substituto | Original | Substituto |
|---|---------------|---|------------------------|
|  | Link Vieta |  | Smart / List |
|  | Option |  | Setup / OPT / |
|  | Direct Tv Rec |  | Shift + Rec / Rec Mode |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | i |  | Info / Angle |
|  | 0/VCR |  | 0 |
|  | 0/VCR |  | Shift + 4 |
|  | Mute |  | Mute / Dimmer |
|  | CH+ |  | CH+ / Page+ |





| Original | Substituto |
|--|---|
|  Vol+ |  Vol+ |
|  CH- |  CH- / Page- |
|  Vol- |  Vol- |
|  [=]/Text |  Text / Goto |
|  [=♦]/STTL |  Subtitle / EQ |
|  [=i]/Index |  Display / Media |
|  [=+]/Hold |  Shift + Stop / |
|  Power DVD |  Shift + Power |
|  Rec DVD |  Rec / Rec Mode |
|  Programme Down |  Shift + CH- / |
|  Programme Up |  Shift + CH+ / |
|  <</I<< DVD |  << / Tune- |
|  <</I<< DVD |  I<< / Preset- |
|  >>/>>I DVD |  >>I / Preset+ |
|  >>/>>I DVD |  >> / Tune+ |
|  Stop DVD |  Stop / Hold |
|  Pause/Step DVD |  Pause / Step / Freeze |

| Original | Substituto |
|--|---|
|  Play DVD |  Play / Slow |



