
 
 

 





 

 

 
 
 

 

 

 


 
 


 
 
 
 







 

 

 



 
 
 
 
 
 


Original	Substituto
 Power	 Power
 Mute	 Mute
 Direct Tv Rec	 TV/R
 Guide	 Guide
 Tv/AV	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [=]/Text	 Text

Original	Substituto
 [=◆]/F.P.	 Subt
 [=i]/Index	 List
 [=+]/Hold	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/VCR	 0
 C	 Pre Ch
 i	 Info
 Vol+	 Vol +
 Vol-	 Vol -





Original	Substituto	Original	Substituto
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Up	 Ch +		
 Programme Down	 Ch -		
 >>I DVD	 >>I		
 I<< DVD	 I<<		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		

