 
 
 

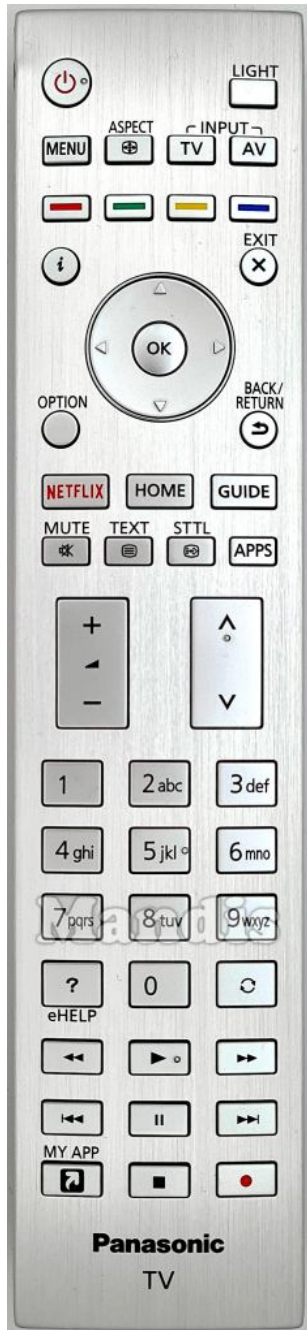 


Original	Substituto
 Power	 Power
 Menu	 Menu
 [+]/Aspect	 3D
 Input TV	 TV/R
 Input AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 i	 Info
 X/Exit	 Exit
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Substituto
 OK	 Ok
 Netflix	 Media
 Home	 Smart
 Guide	 Guide
 Mute	 Mute
 Text	 Text
 STTL	 Subt
 APPS	 Shift + Smart
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Substituto		Original	Substituto
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	?/eHelp		Dual		
	Recall		Pre Ch		
	<<		<<		
	Play		Play		
	>>		>>		
	l<<		l<<		
	Pause		Pause		
	>>l		>>l		
	Stop		Stop		
	Rec		Rec		
	My APP		Shift + Media		

	Original	Substituto

