



Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol +		Vol +
	Vol -		Vol -
	Open/Cl ose		Ej ect / Surround
	Gui de		Gui de / EPG / - / -
	Mut e		Mut e / Di mmer
	I <<		I << / Preset -
	>> I		>> I / Preset +
	<<		<< / Tune-
	>>		>> / Tune+
	St op		St op / Hol d
	Pause		Pause / Step / Freeze
	Pl ay		Pl ay / Sl ow
	I nf o		I nf o / Angl e
	Exi t		Exi t / Cancel / Clear
	Medi a Cent er		Di spl ay / Medi a
	Up		Up
	Home Menu		Menu / Home
	Pop- Up Menu		D. Menu / Top
	Down		Down
	Lef t		Lef t
	Ri ght		Ri ght





Original	Substituto
	OK
	Opt i on
	Ret ur n
	Red
	Green
	Yel low
	Bl ue
	Rec
	Text
	Sub
	Radi o
	Rec Ti ner
	Rec Li st
	Di spl ay Di sc
	Audi o D))
	For mat
	Audi o oo
	OK
	Set up / OPT /
	Back / Ret ur n
	Red / Netf lix / Search
	Green / APP / Repeat
	Yel low / You Tube / Repeat
	Bl ue / Pri me Vi deo / Random
	Rec / Rec M bde
	Text / Got o
	Subt itle / EQ
	TV/ Radi o /
	Sl eep / Ti ner
	Smart / Li st
	Shi ft + Di spl ay / Medi a
	Sound / Ti tle
	Pi ctur e / For mat
	Audi o / Lang I/II

Original	Substituto
	Canal Pl ay
	Vi er a CAST
	Power Tv
	Vol +Tv
	Vol - Tv
	P+Tv
	P- Tv
	Av Tv
	Fav / Marker / PC
	AV / I nput / RDS
	Shi ft + Power
	Shi ft + Vol +
	Shi ft + Vol -
	Shi ft + CH+ /
	Shi ft + CH - /
	Shi ft + AV / I nput / RDS

