



























 

 









 





























 















 







Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Open/Close		Eject / Surround
	Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Media Center		Display / Media
	Up		Up
	Home Menu		Menu / Home
	Pop-Up Menu		D.Menu / Top
	Down		Down
	Left		Left
	Right		Right





Original	Substituto
	 OK
	 Setup / OPT /
	 Back / Return
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Rec / Rec Mode
	 Text / Goto
	 Subtitle / EQ
	 TV/Radio /
	 Sleep / Timer
	 Smart / List
	 +  Shift + Display / Media
	 Sound / Title
	 Picture / Format
	 Audio / Lang I/II

Original	Substituto
	 Fav / Marker / PC
	 AV / Input / RDS
	 +  Shift + Power
	 +  Shift + Vol+
	 +  Shift + Vol-
	 +  Shift + CH+ /
	 +  Shift + CH- /
	 +  Shift + AV / Input / RDS

