 







 

 

 

 

 

 

 

 

 

 

 



 
 


 
 



 
 

 
 


 
 


 
 
 
 
 
 
 
 
 
 
 
 
 


 




| Original | Substituto | Original | Substituto |
|---|---|---|--|
|  DVD/VHS Power |  Power |  0 |  0 |
|  Drive Select |  Media |  */Delete/Reset |  Shift + Exit |
|  TV Power |  Shift + Power |  Input Select |  AV |
|  TV AV |  Shift + AV |  CH+/Tracking/V-Lo |  Ch + |
|  TV CH+ |  Shift + Ch + |  CH-/Tracking/V-Lo |  Ch - |
|  TV CH- |  Shift + Ch - |  ShowView |  Smart |
|  TV Vol+ |  Vol + |  Prog / Check |  Sleep |
|  TV Vol- |  Vol - |  I<< Skip/Index |  I<< |
|  1 |  1 |  Skip/Index >>I |  >>I |
|  2 |  2 |  << |  << |
|  3 |  3 |  Slow/Search/Rew |  >> |
|  4 |  4 |  Stop |  Stop |
|  5 |  5 |  Pause |  Pause |
|  6 |  6 |  Play |  Play |
|  7 |  7 |  i/Status |  Info |
|  8 |  8 |  Exit |  Exit |
|  9 |  9 |  Guide |  Guide |



