 















 





 










 








 




Original	Substituto	Original	Substituto
	Power		Power
	Play		Play / Slow
	Rec		Rec / Rec Mode
	Input		AV / Input / RDS
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	G		Guide / EPG / -/--
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK

Original	Substituto	Original	Substituto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	P+		CH+ / Page+
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original	Substituto	Original	Substituto
 8	 8		
 9	 9		
 0	 0		
 Lang	 Audio / Lang I/II		
 TXT	 Text / Goto		

