



Original	Substituto	Original	Substituto
Power	Power	8	8
Power Tv	Shift + Power	9	9
Vol+ Tv	Vol+	ShowView	Picture / Format
CH+ Tv	Shift + CH+ /	Delete/*	Zoom / Size
Select Drive	Smart / List	0	0
AV Tv	Shift + AV / Input / RDS	Input Select	AV / Input / RDS
Vol- Tv	Vol-	Prog/Check	TV/Radio /
CH- Tv	Shift + CH- /	I<< Skip	I<< / Preset-
1	1	Skip >>I	>>I / Preset+
2	2	<< Slow/Search	<< / Tune-
3	3	Slow/Search >>	>> / Tune+
CH/Page Up	CH+ / Page+	Stop	Stop / Hold
4	4	Pause	Pause / Step / Freeze
5	5	Play/x1.3	Play / Slow
6	6	i/Status	Info / Angle
CH/Page Down	CH- / Page-	Guide	Guide / EPG / -/-
7	7	Exit	Exit / Cancel / Clear





Original	Substituto	Original	Substituto
Direct Navigator	D.Menu / Top	Audio	Audio / Lang I/II
Left/<II	Left	STTL	Subtitle / EQ
Up	Up	Display	Display / Media
OK	OK	Time Slip	Sleep / Timer
Right/ II>	Right		
Function Menu	Menu / Home		
Option	Setup / OPT /		
Down	Down		
Return	Back / Return		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow/Create Chapter	Yellow / YouTube / Repeat		
Blue/Manual Skip	Blue / Prime Video / Random		
Rec	Rec / Rec Mode		
Rec Mode	Shift + Rec / Rec Mode		
EXT Link	Eject / Surround		
Direct Tv Rec	Text / Goto		

