





 

 



Original	Substituto	Original	Substituto
	Power		Power
	TV Power	+	Shift + Power
	TV Vol+	+	Shift + Vol+
	TV Vol+		Vol+
	TV CH+	+	Shift + CH+ /
	Drive Select		Text / Goto
	TV AV	+	Shift + AV / Input / RDS
	TV Vol-	+	Shift + Vol-
	TV Vol-		Vol-
	TV CH-	+	Shift + CH- /
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	ShowView		Picture / Format
	*/Delete	+	Shift + Exit / Cancel / Clear
	0		0
	Input Select		AV / Input / RDS
	Status		Info / Angle
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play / 1.3		Play / Slow
	Time Slip		Sleep / Timer





Original	Substituto
 Prog / Check	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Direct Navigator	 Smart / List
 Left / <	 Left
 Up	 Up
 Right / >	 Right
 Function Menu	 Menu / Home
 OK	 OK
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red / Audio	 Audio / Lang I/II
 Red / Audio	 Red / Netflix / Search
 Green / Display	 Display / Media
 Green / Display	 Green / APP / Repeat
 Yellow / Create Chapter	 Yellow / YouTube / Repeat
 Blue / Manual Skip	 Blue / Prime Video / Random

Original	Substituto
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Ext Link	 D.Menu / Top
 Direct Tv Rec	 Eject / Surround

