



Original	Substituto
 Power	 Power
 [+]	 Info / Angle
 Mute	 Mute / Dimmer
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 C	 Back / Return

Original	Substituto
 0/VCR	 0
 -/--	 Guide / EPG / -/--
 Vol-	 Vol-
 Tv/Text	 Text / Goto
 F.P.	 Sleep / Timer
 [i]/Index	 TV/Radio /
 [+]/Hold	 Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 [?]/Reveal	 Smart / List
 [o]/Time Text	 Display / Media



