



 
























 









 

 





Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	Teletext		Text / Goto
	[112]		Zoom / Size
	Subtitle		Subtitle / EQ
	[<>]		Picture / Format
	Red/Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Up		Up
	Left		Left
	Back		Back / Return
	OK		OK
	Right		Right

Original	Substituto	Original	Substituto
	Menu/Browse		Menu / Home
	Exit		Exit / Cancel / Clear
	Down		Down
	Option		Setup / OPT /
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Substituto	Original	Substituto
	9		9
	MHEG/Cancel	+	Shift + Exit / Cancel / Clear
	0		0
	P↔P		Fav / Marker / PC
	Ambilight		Display / Media
	Mode		Smart / List

Original	Substituto

