 

 

 



 











 



 
 


 



 











 



 


 




 







 


 




Original	Substituto	Original	Substituto
 Power	 Power	 Back	 Back / Return
 Open/Close	 Eject / Surround	 Down	 Down
 Disc/Pop Up Menu	 Shift + Menu /	 Info	 Info / Angle
 Radio	 TV/Radio /	 Play	 Play / Slow
 Audio Source	 AV / Input / RDS	 Pause	 Pause / Step / Freeze
 USB	 Shift + 8	 <<	 << / Tune-
 Red	 Red / Netflix / Search	 Stop	 Stop / Hold
 Green	 Green / APP / Repeat	 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat	 I<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >I	 >>I / Preset+
 Home	 Menu / Home	 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top	 Vol+	 Vol+
 Options	 Setup / OPT /	 Surr. Sound	 Shift + Eject / Surround
 Up	 Up	 Treble	 Zoom / Size
 Left	 Left	 Vol-	 Vol-
 OK	 OK	 Sound Mode	 Sound / Title
 Right	 Right	 Bass	 Picture / Format





Original	Substituto
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
AUDIO	LANG I/II Audio / Lang I/II
0	HDMI - SAT 0
SUBTITLE	EQ Subtitle / EQ
AUDIO SYNC	SHIFT + LANG I/II Audio / Lang I/II
BONUS VIEW	TIMER SLEEP Sleep / Timer
HDMI	SHIFT + HDMI - SAT HDMI - SAT 0
REPEAT	SHIFT + APP REPEAT Repeat

Original	Substituto

