








 


 



 
 



 

 
 

 

 







 

 

 

 


 

 

 




Original	Substituto	Original	Substituto
	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Play		Play
	>>		>>
	<<		<<
	Tv Guide		Guide
	Setup		Menu
	[<>]/Format		Format
	Sources		AV
	Home		Smart
	Tv/Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Info		Info
	Back		Back
	Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4





Original		Substituto		Original	Substituto
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Text		Text		
	Subtitle		Subt		
	List		List		

