
 






 
 
 

 


 






Original	Substituto
	Power
	Ambilight
	Sources
	Settings
	Top Picks
	Search
	Exit/TV
	Tv Guide
	Windows
	List
	Up
	Left
	OK
	Right
	Down
	Back / Return
	Info / Angle

Original	Substituto
	Home
	Red
	Green
	Yellow
	Blue
	Vol+
	Netflix
	CH+ / Page+
	Vol-
	Mute
	CH- / Page-
	1
	2
	3
	4
	5
	6





Original		Substituto		Original		Substituto	
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				

