




Original	Substituto	Original	Substituto
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/<<	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/>>/□	 >>	 P-	 Ch -
 >◆	 D. Menu	 1	 1
 [I]	 Guide	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch






Original		Substituto		Original		Substituto	
	[i+]		Info				
	I-II		Dual				
	[> <]		Subt				
	[112]		3D				
	[]→		AV				
	♪ Smart		Smart				
	[] Smart		Media				
	[<>]		Back				
	[-o-]/Active Control		Options				





Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol -
 Red/Rec/Instant	 Red	 Mute	 Mute
 Green/ <<	 Green	 P+	 Ch +
 Yellow/Stop	 Yellow	 P-	 Ch -
 Blue/Play	 Blue	 1	 1
 White/ >> / □	 >>	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch
 Left	 Left	 [i+]	 Info
 Vol+	 Vol +	 I-II	 Dual





Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol -
 Red/Rec/Instant	 Red	 Mute	 Mute
 Green/Left	 Green	 P+	 Ch +
 Yellow/Stop	 Yellow	 P-	 Ch -
 Blue/Play	 Blue	 1	 1
 White/Right	 >>	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [=]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch
 Left	 Left	 [i+]	 Info
 Vol+	 Vol +	 I-II	 Dual





Original	Substituto	Original	Substituto
[> <]	Subt		
[1 2]	3D		
[]→	AV		
♪ Smart	Smart		
[] Smart	Media		
[<>]	Back		
[-o-]/Active Control	Options		

