











 




 





 













 



 






| Original  | Substituto | Original  | Substituto    |
|---|------------|---|---------------|
|    | Standby    |    | Power         |
|    | 1          |    | 1             |
|    | 2          |    | 2             |
|    | 3          |    | 3             |
|    | 4          |    | 4             |
|    | 5          |    | 5             |
|    | 6          |    | 6             |
|    | 7          |    | 7             |
|    | 8          |    | 8             |
|   | 9          |   | 9             |
|  | 0          |  | 0             |
|  | Vol+       |  | Vol+          |
|  | Vol-       |  | Vol-          |
|  | Left       |  | Left          |
|  | Right      |  | Right         |
|  | I<<        |  | I<< / Preset- |
|  | >>I        |  | >>I / Preset+ |

| Original  | Substituto | Original  | Substituto                |
|---|------------|---|---------------------------|
|    | Stop       |    | Stop / Hold               |
|    | Play/Pause |    | Play / Slow               |
|    | Play/Pause |    | Pause / Step / Freeze     |
|    | I>/Resume  |    | Shift + Play /            |
|    | Surround   |    | Eject / Surround          |
|    | Sound      |    | Sound / Title             |
|    | Night      |    | Shift + Sleep / Timer     |
|    | Mute       |    | Mute / Dimmer             |
|    | Repeat     |    | Green / APP / Repeat      |
|   | Repeat A-B |   | Yellow / YouTube / Repeat |
|  | Sleep      |  | Sleep / Timer             |
|  | DIM        |  | Shift + Mute / Dimmer     |
|  | Subw +     |  | Up                        |
|  | Rear +     |  | Shift + CH+ /             |
|  | Center +   |  | CH+ / Page+               |
|  | Tv Vol+    |  | Shift + Vol+              |
|  | Subw -     |  | Down                      |







 







 



 

 







 













| Original  | Substituto | Original  | Substituto |
|---|------------|---|------------|
|    | Standby    |    | Power      |
|    | 1          |    | 1          |
|    | 2          |    | 2          |
|    | 3          |    | 3          |
|    | 4          |    | 4          |
|    | 5          |    | 5          |
|    | 6          |    | 6          |
|    | 7          |    | 7          |
|    | 8          |    | 8          |
|    | 9          |    | 9          |
|   | 0          |   | 0          |
|  | Up         |  | Up         |
|  | Left       |  | Left       |
|  | OK         |  | OK         |
|  | Right      |  | Right      |
|  | Down       |  | Down       |





