



 
 





 
 



 



 



 







 









 
 

 
 


 




 
 
 
 






| Original | Substituto | Original | Substituto |
|--|---|--|---|
|  Power |  Power |  >> / Album + |  >> |
|  Tuner |  4 |  Repeat |  Text |
|  Tape 1 / 2 |  5 |  Program |  Shift + Sleep |
|  Aux |  6 |  Shuffle |  Smart |
|  CD 1 |  1 |  Display |  Info |
|  CD 2 |  2 |  Rec |  Rec |
|  CD 3 |  3 |  CLK / Timer |  Shift + AV |
|  DSC |  7 |  Timer On / Off |  AV |
|  VAC |  8 |  DBB |  Ch - |
|  Vol - |  Vol - |  DIM |  Media |
|  Vol + |  Vol + |  Sleep |  Sleep |
|  I< / Title - |  I<< |  Mute |  Mute |
|  >I / Title + |  >>I |  IS |  Dual |
|  Stop |  Stop |  MAX |  Ch + |
|  Play / Pause |  Play | | |
|  Play / Pause |  Pause | | |
|  << / Album - |  << | | |

