



Original	Substituto
 Mute	 Mute / Dimmer
 Power	 Power
 Phono	 Shift + 9
 Tuner	 Shift + 6
 CD	 Shift + 3
 CDR / Tape	 Shift + 5
 TV	 Shift + 1
 VCR	 Shift + 4
 SAT	 Shift + 0
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Substituto
 8	 8
 9	 9
 0	 0
 Menu / Guide	 Menu / Home
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Vol +	 Vol+
 Down	 Down
 Vol -	 Vol-
 i / News TA	 Info / Angle
 Channel/Track -	 I<< / Preset-
 Channel/Track +	 >>I / Preset+
 Loudness	 Audio / Lang I/II
 SubW On/Off	 Subtitle / EQ
 FR. D.	 Zoom / Size





Original	Substituto	Original	Substituto
	Night		Sleep / Timer
	Virtual Mode		Sound / Title
	Surround On/Off		Eject / Surround
	Sub Woofer +		CH+ / Page+
	Rear Channel +		>> / Tune+
	Surround Mode		Picture / Format
	Sub Woofer -		CH- / Page-
	Rear Channel -		<< / Tune-
	Test Tone		Text / Goto

