



























 




 
 


Original	Substituto
 Timer Set	 Sleep / Timer
 Standby - On	 Power
 Prog / System	 Menu / Home
 Prog / System	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Rec	 Rec / Rec Mode
 Display	 Display / Media
 Zoom	 Zoom / Size
 P -	 CH- / Page-
 Clear	 Shift + Exit / Cancel / Clear
 Exit / Status	 Exit / Cancel / Clear
 P +	 CH+ / Page+
 Title	 Sound / Title
 System	 Smart / List
 Return	 Back / Return

Original	Substituto
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 VCR Menu	 D.Menu / Top
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze
 >> FF	 >> / Tune+
 1	 1
 2	 2
 3	 3







Original	Substituto	Original	Substituto
	Slow		Shift + Play /
	4		4
	5		5
	6		6
	SV / V+		AV / Input / RDS
	7		7
	8		8
	9		9
	Index		Shift + Info / Angle
	0		0
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Surround		Eject / Surround
	Sound		Shift + Sound / Title
	Vol -		Vol-
	Vol +		Vol+

Original	Substituto





Original	Substituto	Original	Substituto
 Timer Set	 Sleep / Timer	 VCR	 Shift + 4
 Standby - On	 Power	 Disc Menu	 D.Menu / Top
 Prog / System	 Menu / Home	 Up	 Up
 Prog / System	 TV/Radio /	 OK	 OK
 Audio	 Audio / Lang I/II	 Left	 Left
 Subtitle	 Subtitle / EQ	 Right	 Right
 Angle	 Info / Angle	 Stop	 Stop / Hold
 Display	 Display / Media	 Down	 Down
 Zoom	 Zoom / Size	 Play	 Play / Slow
 I<<	 I<< / Preset-	 << REW	 << / Tune-
 Clear	 Exit / Cancel / Clear	 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+	 >> FF	 >> / Tune+
 Title	 Shift + Sound / Title	 1	 1
 Mode	 Text / Goto	 2	 2
 Return	 Back / Return	 3	 3
 DVD	 Shift + 2	 Slow	 Shift + Play /
 TUNER	 Shift + 6	 4	 4

Original	Substituto	Original	Substituto
 VCR	 Shift + 4	 Disc Menu	 D.Menu / Top
 Up	 Up	 OK	 OK
 Left	 Left	 Right	 Right
 Stop	 Stop / Hold	 Down	 Down
 Play	 Play / Slow	 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze	 >> FF	 >> / Tune+
 1	 1	 2	 2
 3	 3	 Slow	 Shift + Play /
 4	 4		






















Original		Substituto		Original		Substituto	
	5		5				
	6		6				
	SV / V+		AV / Input / RDS				
	7		7				
	8		8				
	9		9				
	Search		Red / Netflix / Search				
	+10		Guide / EPG / -/--				
	0		0				
	Repeat		Green / APP / Repeat				
	Repeat A-B		Yellow / YouTube / Repeat				
	Surround		Eject / Surround				
	Sound		Sound / Title				
	Vol -		Vol-				
	Vol +		Vol+				





Original	Substituto
 Standby - On	 Power
 Prog / System	 TV/Radio /
 Prog / System	 Menu / Home
 Band	 Smart / List
 I<<	 CH- / Page-
 I<<	 I<< / Preset-
 >>I	 CH+ / Page+
 >>I	 >>I / Preset+
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down

Original	Substituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Vol -	 Vol-
 Vol +	 Vol+

