









 






















 







 




Original	Substituto
 Standby / On	 Power
 Mute	 Mute / Dimmer
 ▶ Play / Up	 Play / Slow
 ▶◀ Still	 Pause / Step / Freeze
 ■ Stop / Down	 Stop / Hold
 REC	 Rec / Rec Mode
 ◀◀ REW / Left	 << / Tune-
 ▶▶ FWD / Right	 >> / Tune+
 ▶  / Index	 >>  / Preset+
 Audio	 Audio / Lang I/II
 Turbo Timer	 Sleep / Timer
 System	 D.Menu / Top
 Menu	 Menu / Home
 ▶ Play / Up	 Up
 ▶  / Index	 Info / Angle
 ◀◀ REW / Left	 Left
 Menu	 OK

Original	Substituto
 ▶▶ FWD / Right	 Right
 Clear	 Exit / Cancel / Clear
 Stop / Down	 Down
 TV Vol +	 Vol+
 P+	 CH+ / Page+
 TV Vol -	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original	Substituto
 Slow	 Shift + Play /
 Status / Exit	 Shift + Exit / Cancel / Clear
 TV Prog +	 Shift + CH+ /
 TV Prog -	 Shift + CH- /

Original	Substituto

