









 

 

 







 

 







 



 

 

 







 

 





 



 

 





















Original	Substituto	Original	Substituto
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto













 





 







 
 
 

 



 



 

 



 







 

 





 











	Original	Substituto		Original	Substituto
	[≡⊕]	 Subtitle / EQ			
	[/ ≡]	 Picture / Format			
	[≡ X]	 Exit / Cancel / Clear			
	[≡ ⇅]	 Zoom / Size			
	[≡ ?]	 Display / Media			
	[≡ i]	 Smart / List			




 









 









Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 Up / P+	 Up	 +10	 Guide / EPG / -/-
 Up / P+	 CH+ / Page+	 0	 0
 Menu	 Menu / Home	 Repeat	 Green / APP / Repeat
 Left	 Left	 Search	 Red / Netflix / Search
 Select	 OK	 A→B	 Yellow / YouTube / Repeat
 Right	 Right	 Display	 Display / Media
 Down / P-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Down / P-	 Down	 Subtitle	 Subtitle / EQ
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio / PROGRAM
 3	 3	 C	 Blue / Prime Video / Random
 4	 4	 Angle	 Info / Angle
 5	 5	 Return	 Back / Return
 6	 6	 Time	 Sleep / Timer
 7	 7	 << / Tune-	 << / Tune-
 8	 8	 >> / Tune+	 >> / Tune+








































































Original	Substituto	Original	Substituto
			 I<< / Preset-
			 >>I / Preset+
			 Play / Slow
			 Pause / Step / Freeze
			 Stop / Hold
	Title		 Sound / Title
	Open / Close		 Eject / Surround





Original	Substituto	Original	Substituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Substituto	Original	Substituto
Menu Right	 Right	Menu Down	 Down
Menu Down	 Down	Back	 Back / Return
Back	 Back / Return	Volume+	 Vol+
Volume+	 Vol+	Chan.Up	 CH+ / Page+
Chan.Up	 CH+ / Page+	Volume-	 Vol-
Volume-	 Vol-	Display	 Display / Media
Display	 Display / Media	Chan.Down	 CH- / Page-
Chan.Down	 CH- / Page-	1	 1
1	 1	2	 2
2	 2	3	 3
3	 3	4	 4
4	 4	5	 5
5	 5	6	 6
6	 6	7	 7
7	 7	8	 8
8	 8	9	 9
9	 9		





Original	Substituto	Original	Substituto
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

