
 









 

 


 
 

 




 
 












Original	Substituto
 Power	 Power
 ambilight	 Pre Ch
 Windows	 Options
 Exit/TV	 Exit
 Rakuten Tv	 Shift + Media
 Netflix	 Media
 Menu	 Menu
 Smart/Colors	 Smart
 Sources/Pair	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ←	 Back
 Home	 Shift + Smart
 +	 TV/R

Original	Substituto
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv Guide	 Guide
 CH+	 Ch +
 CH-	 Ch -
 1	 1





Original		Substituto		Original		Substituto	
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
TEXT	Text	REPEAT TEXT	Text				
LIST	List	DISC NAV LIST	List				

