



| Original | Substituto |
|--|---|
|  Power |  Power |
|  Open / Close |  Exit |
|  Disc |  Shift + 1 |
|  Dock |  Shift + 2 |
|  USB |  Shift + 3 |
|  Radio |  Shift + 4 |
|  Aux |  Shift + 5 |
|  Digital In |  Shift + 6 |
|  TV |  Shift + 7 |
|  MP3 Line-In |  Shift + 8 |
|  Disc Menu |  D. Menu |
|  Setup |  Menu |
|  Up |  Up |
|  Left |  Left |
|  OK |  Ok |
|  Right |  Right |
|  Down |  Down |

| Original | Substituto |
|--|---|
|  Back / Title |  Back |
|  Display |  Info |
|  Prev / REW |  << |
|  Prev / REW |  I<< |
|  Play / Pause |  Play |
|  Play / Pause |  Pause |
|  Next / FFW |  >> |
|  Next / FFW |  >>I |
|  Mute |  Mute |
|  Stop |  Stop |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Ambisound |  Smart |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |





| Original | | Substituto | | Original | | Substituto | |
|----------|------------------|------------|--------------|----------|-------|------------|------|
| | 5 | | 5 | | Audio | | Blue |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | 0 | | 0 | | | | |
| | Select / Program | | Pre Ch | | | | |
| | Select / Program | | Sleep | | | | |
| | Repeat / Shuffle | | Text | | | | |
| | Audio Sync | | Red | | | | |
| | Bass / Treble | | Green | | | | |
| | Sound | | Yellow | | | | |
| | Sound | + | Shift + Dual | | | | |
| | Subtitle | | Subt | | | | |
| | Angle | | Format | | | | |
| | Zoom | | Eject | | | | |
| | Audio | | Dual | | | | |

