





 

 







 





















Original	Substituto
	 Power
	 Display / Media
	 Info / Angle
	 AV / Input / RDS
	
	
	
	
	
	
	
	 Setup / OPT /
	 << / Tune-
	 I<< / Preset-
	 Play / Slow
	 >> / Tune+
	 >>I / Preset+

Original	Substituto
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Mute / Dimmer
	 Vol-
	 Shift + Red / Netflix /
	 Smart / List
	 CH+ / Page+
	 Exit / Cancel / Clear
	 CH- / Page-
	 Shift + 2
	 1



