



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Subtitle		Subtitle / EQ
	Disney+		Picture / Format
	Ambilight		D.Menu / Top
	=		Fav / Marker / PC
	=*		Setup / OPT /
	Sources/Pair		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Tv/Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	Vol+		Vol+
	Channels		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	0		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original	Substituto
	8
	9
	Tv Guide
	0
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Options
	Netflix
	Apps
	YouTube
	prime video

Original	Substituto

