



Original	Substituto	Original	Substituto
	[i+]		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Power		Power
	Vol-		Vol-
	Left		Left
	Menu		Menu / Home
	Vol+		Vol+
	Right		Right
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Down		Down
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[=]		Text / Goto
	0		0
	P<P/Surf		Fav / Marker / PC
	Timer		Sleep / Timer
	[♦]		Setup / OPT /
	[+]		Zoom / Size
	[?]/I-II		Audio / Lang I/II
	Red/Picture		Red / Netflix / Search
	Red/Picture		Picture / Format
	Green/Sound		Green / APP / Repeat
	Green/Sound		Sound / Title
	Yellow/Timer		Yellow / YouTube / Repeat



