





















































 


























 








 









Original	Substituto	Original	Substituto
Source	AV / Input / RDS	>10	Guide / EPG / -/--
Power	Power	0/10	0
DVD	Red / Netflix / Search	C	Exit / Cancel / Clear
TUN	Green / APP / Repeat	Tv Vol+	Shift + Vol+
V1	Blue / Prime Video / Random	Tv Vol-	Shift + Vol-
V2	Shift + Blue / Prime	Up/FQ+	Up
A1	Yellow / YouTube / Repeat	Up/FQ+	>> / Tune+
A2	Shift + Red / Netflix /	Left/ST-	Left
1	1	Left/ST-	I<< / Preset-
2	2	Right/ST+	Right
3	3	Right/ST+	>>I / Preset+
4	4	Down/FQ-	Down
5	5	Down/FQ-	<< / Tune-
6	6	Band	Display / Media
7	7	Station Memory	Smart / List
8	8	Mono	Audio / Lang I/II
9	9	1 Tv	Shift + 1

 

















 

 

 



 











 



 














 




 

 







Original	Substituto	Original	Substituto
	2 Tv	 + 	Shift + 2
	3 Tv	 + 	Shift + 3
	4 Tv	 + 	Shift + 4
	5 Tv	 + 	Shift + 5
	6 Tv	 + 	Shift + 6
	7 Tv	 + 	Shift + 7
	8 Tv	 + 	Shift + 8
	9 Tv	 + 	Shift + 9
	>10 Tv	 + 	Shift + Guide / EPG / -/-
	0/10 Tv	 + 	Shift + 0
	C Tv	 + 	Shift + Exit / Cancel / Clear
	Power Tv	 + 	Shift + Power
	Up Tv	 + 	Shift + Up
	Left Tv	 + 	Shift + Left
	Enter Tv	 + 	Shift + OK
	Right Tv	 + 	Shift + Right
	Down Tv	 + 	Shift + Down
	Menu Tv	 + 	Shift + Menu /
	Stop Tv	 + 	Shift + Stop /
	Play Tv	 + 	Shift + Play /
	Pause Tv	 + 	Shift + Pause / Step /
	Rec Tv	 + 	Shift + Rec / Rec Mode
	I<< Tv	 + 	Shift + I<< / Preset-
	>>I Tv	 + 	Shift + >>I / Preset+
	CH- Tv	 + 	Shift + CH- /
	CH+ Tv	 + 	Shift + CH+ /
	<< Tv	 + 	Shift + << /
	>> Tv	 + 	Shift + >> /
	PGM Tv	 + 	Shift + D.Menu / Top Menu
	RDM Tv	 + 	Shift + Subtitle / EQ
	Disp Tv	 + 	Shift + Display / Media
	Last Memory Tv	 + 	Shift + Back / Return



 





















 

 



















 



 

 










 








Original	Substituto	Original	Substituto
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 Power	 Power	 6	 6
 DVD	 Green / APP / Repeat	 Time/Clock ADJ	 Shift + Sleep / Timer
 TUN	 Red / Netflix / Search	 7	 7
 V1	 Blue / Prime Video / Random	 [I]/DTS	 Picture / Format
 V2	 Shift + Blue / Prime	 8	 8
 A1	 Yellow / YouTube / Repeat	 Test Tone	 Text / Goto
 A2	 Shift + Red / Netflix /	 9	 9
 1	 1	 CH Select	 Shift + Smart / List
 Midnight	 Zoom / Size	 >10	 Guide / EPG / -/--
 2	 2	 Sound Control	 Sound / Title
 P.Bass	 Eject / Surround	 0/10	 0
 3	 3	 DSP	 Setup / OPT /
 Function	 Smart / List	 C	 Fav / Marker / PC
 4	 4	 Enter/Disc / DSP	 Shift + OK
 FL Dimmer	 Shift + Mute / Dimmer	 TV CH+	 Shift + CH+ /
 5	 5	 Tv Vol+	 Shift + Vol+

 












 






 
 
 

 

 




























 



 



 
 







Original	Substituto	Original	Substituto
 System	 Vol+	 Return	 Back / Return
 TV CH-	 Shift + CH- /	 Page-	 I<< / Preset-
 Tv Vol-	 Shift + Vol-	 Page+	 >>I / Preset+
 System	 Vol-	 CH-	 CH- / Page-
 Tv Input	 Shift + AV / Input / RDS	 CH+	 CH+ / Page+
 Power Tv	 Shift + Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Up/FQ+	 Up	 Top Menu	 D.Menu / Top
 Left/ST-	 Left	 PGM	 TV/Radio /
 Enter	 OK	 Subtitle	 Subtitle / EQ
 Right/ST+	 Right	 RDM	 Shift + Display / Media
 Down/FQ-	 Down	 Audio	 Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Disp	 Display / Media
 Menu	 Menu / Home	 Last Memory	 Shift + Back / Return
 Stop	 Stop / Hold	 Angle	 Info / Angle
 Play	 Play / Slow	 Repeat	 Shift + Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 A-B	 Shift + Yellow / YouTube / Repeat



 



















 





 

























 

 















Original	Substituto	Original	Substituto
 Source	 AV / Input / RDS	 0/10	 0
 Power	 Power	 C	 Fav / Marker / PC
 DVD	 Green / APP / Repeat	 Up / Pause	 Up
 TUN	 Red / Netflix / Search	 Left/Left	 Left
 V1	 Blue / Prime Video / Random	 Enter/Play	 Play / Slow
 V2	 Shift + Blue / Prime	 Right/Right	 >> / Tune+
 A1	 Yellow / YouTube / Repeat	 Down/Stop	 Stop / Hold
 A2	 Shift + Red / Netflix /	 Down/Stop	 Down
 1	 1	 Enter/Play	 OK
 2	 2	 Up / Pause	 Pause / Step / Freeze
 3	 3	 <</CH-/<<	 CH- / Page-
 4	 4	 >>/CH+/>>	 CH+ / Page+
 5	 5	 Left/Left	 << / Tune-
 6	 6	 Right/Right	 Right
 7	 7	 1 V2	 Shift + 1
 8	 8	 2 V2	 Shift + 2
 9	 9	 3 V2	 Shift + 3







Original	Substituto	Original	Substituto
 Source	 AV / Input / RDS	 >10	 Guide / EPG / -/--
 Power	 Power	 0/10	 0
 DVD	 Green / APP / Repeat	 C	 Fav / Marker / PC
 TUN	 Red / Netflix / Search	 Up/Pause	 Up
 V1	 Blue / Prime Video / Random	 Left/ <<	 << / Tune-
 V2	 Shift + Blue / Prime	 Enter/Play	 OK
 A1	 Yellow / YouTube / Repeat	 Right/ >>	 >> / Tune+
 A2	 Shift + Red / Netflix /	 Down/Stop	 Stop / Hold
 1	 1	 Down/Stop	 Down
 2	 2	 Enter/Play	 Play / Slow
 3	 3	 Up/Pause	 Pause / Step / Freeze
 4	 4	 I<<	 I<< / Preset-
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Left/ <<	 Left
 7	 7	 Right/ >>	 Right
 8	 8	 PGM/Top Menu	 TV/Radio /
 9	 9	 Subtitle/RDM	 Subtitle / EQ





Original	Substituto	Original	Substituto
Audio/Disp	Display / Media	Right/>>> A2	Shift + >> /
Repeat	Shift + Green / APP /	Down/Stop A2	Shift + Down
1 A2	Shift + 1	Down/Stop A2	Shift + Stop /
2 A2	Shift + 2	Enter/Play A2	Shift + OK
3 A2	Shift + 3	Up/Pause A2	Shift + Up
4 A2	Shift + 4	I<< A2	Shift + I<< / Preset-
5 A2	Shift + 5	>>I A2	Shift + >>I / Preset+
6 A2	Shift + 6	Left/<< A2	Shift + Left
7 A2	Shift + 7	Right/>>> A2	Shift + Right
8 A2	Shift + 8	PGM/Top Menu	Shift + TV/Radio / Program
9 A2	Shift + 9	RDM/Subtitle A2	Shift + Subtitle / EQ
>10 A2	Shift + Guide / EPG / -/-	Audio Disp A2	Shift + Display / Media
0/10 A2	Shift + 0	Repeat A2	Shift + Yellow / YouTube /
C A2	Shift + Fav / Marker / PC		
Up/Pause A2	Shift + Pause / Step /		
Left/<< A2	Shift + << /		
Enter/Play A2	Shift + Play /		

Slow

