 


 
 
 


 
 






 




 


 
 

 
 
 

 



 












 







 

 

 



 







Original	Substituto	Original	Substituto
 Standby	 Power	 Stop Rec	 Shift + Stop
 HDD/DVD	 Media	 I<</Prev	 I<<
 Pause Live Tv	 Shift + Pause	 Channel-	 Ch -
 Home Menu	 Smart	 >>I/Next	 >>I
 Info	 Info	 Channel+	 Ch +
 Disc Navigator/Top	 List	 Timer Rec	 Shift + AV
 Guide	 Guide	 Red	 Red
 Up	 Up	 Green	 Green
 Right/CM Skip →	 Right	 Yellow	 Yellow
 Down	 Down	 Blue	 Blue
 Left/CM Back ←	 Left	 A.T.V/D.T.V	 Options
 Enter	 Ok	 <</><I	 <<
 Pause	 Pause	 >>I/>	 >>
 Return	 Back	 Help	 Exit
 Rec	 Rec	 Tv/DVD	 TV/R
 Play	 Play	 Rec Mode	 Shift + Rec
 Stop	 Stop	 1	 1





	Original	Substituto		Substituto
	2	2		
	3	3		
	4	4		
	Audio	DUAL		Dual
	5	5		
	Subtitle	AD SUBT		Subt
	6	6		
	Angle	ECO 3D		3D
	7	7		
	8	8		
	9	9		
	Play Mode	SHIFT + PLAY MODE		Shift + Play
	0	0		
	Shift	PROG SLEEP		Sleep
	Clear	SHIFT + CLEAR EXIT		Shift + Exit
	One Touch	PICTURE FORMAT		Format
	Input Select	TIMER AV		AV

	Original	Substituto		Substituto
	Menu	TOP MENU MENU		Menu
	Display	SHIFT + DISPLAY INFO		Shift + Info
	Text	REPEAT TEXT		Text

