
 

 









 




 












 

 



 







 





Original	Substituto
 Power Receiver	 Power
 BD	 1
 DVD	 2
 DVR / BDR	 5
 HDMI	 0
 TV	 TV/Radio /
 CD	 3
 NET	 7
 ADAPTER	 Eject / Surround
 iPod USB	 8
 Tuner	 6
 Video	 4
 CD-R	 9
 Input Select	 Shift + Left
 Input Select ~	 Shift + Right
 Master Volume	 Vol+
 Master Volume	 Vol-

Original	Substituto
 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top
 Band	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Tune+	 Shift + >> /
 Up	 Up
 Tools	 Setup / OPT /
 T.Edit	 Text / Goto
 Video	 Picture / Format
 Left	 Left
 Preset -	 Shift + I<< / Preset-
 Enter	 OK
 Preset +	 Shift + >>I / Preset+
 Right	 Right
 iPod CTRL	 Smart / List
 Home Menu	 Menu / Home
 Tune-	 Shift + << /

Tune-





Original	Substituto	Original	Substituto
	Down		Stop
	Down		Stop / Hold
	Return		>>
	Back / Return		>> / Preset+
	Auto / Alc / Direct		1 Tuner
	Info / Angle		Shift + 1
	Stereo		2 Tuner
	Sound / Title		Shift + 2
	Repeat		3 Tuner
	Green / APP / Repeat		Shift + 3
	Standard		Shift + Smart / List
	Random		Audio DVD
	Blue / Prime Video / Random		Shift + Audio / Lang I/II
	Guide / EPG / -/-		Shift + 4
	Guide / EPG / -/-		Shift + Setup / OPT / Tools
	<< / Tune-		MCACC
	<< / Tune-		Fav / Marker / PC
	Red / Netflix / Search		Shift + 5
	Red / Netflix / Search		Shift + 6
	Play / Slow		Sleep
	Play / Slow		Sleep / Timer
	>> / Tune+		Disp
	>> / Tune+		Display / Media
	Exit / Cancel / Clear		7 Tuner
	Exit / Cancel / Clear		Shift + 7
	I<< / Preset-		Shift + CH+ /
	I<< / Preset-		Shift + 8
	Pause / Step / Freeze		8 Tuner
	Pause / Step / Freeze		A.ATT.
	Zoom / Size		Yellow / YouTube / Repeat
	Shift + Menu / Home		Repeat




























 

 



 

 







 





 

 

 






Original	Substituto
DIMMER 9 9 Tuner	SHIFT + 9 Shift + 9
DIMMER 9 Dimmer	SHIFT + DIMMER MUTE Shift + Mute / Dimmer
CH + CH +	+ CH PAGE CH+ / Page+
D.ACCESS D.Access	SHIFT + D.MENU Shift + D.Menu / Top Menu
0 0 Tuner	SHIFT + 0 Shift + 0
CLASS Class	SHIFT + MEDIA DISPLAY Shift + Display / Media
CLASS ENTER Enter (Class)	SHIFT + OK Shift + OK
CH - CH -	CH PAGE - CH- / Page-

Original	Substituto





 

















 











 

 



 



 
 



 

 















Original	Substituto	Original	Substituto
 Power Source	 Power	 1	 1
 DVD	 Shift + 2	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Up	 Up	 Audio	 Audio / Lang I/II
 Left	 Left	 4	 4
 Enter	 Shift + OK	 5	 5
 Enter	 OK	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Return	 Back / Return	 9	 9
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Menu	 Menu / Home
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		





Original	Substituto	Original	Substituto
 Power Source	 Power	 1	 1
 Tuner	 Shift + 6	 2	 2
 Master Volume	 Vol+	 3	 3
 Master Volume	 Vol-	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Band	 Subtitle / EQ	 6	 6
 Tune+	 >> / Tune+	 Disp	 Display / Media
 Tune+	 Up	 7	 7
 T.Edit	 Text / Goto	 8	 8
 Preset+	 >> / Preset+	 9	 9
 Preset-	 Left	 D.Access	 D.Menu / Top
 Enter	 OK	 0	 0
 Preset-	 << / Preset-	 Class	 Shift + Display / Media
 Preset+	 Right	 Menu	 Menu / Home
 Tune-	 << / Tune-	 Search	 Red / Netflix / Search
 Tune-	 Down		
 MPX	 Zoom / Size		

