



 

 


 











 
 
 

 
 

 



 







Original	Substituto
Power Receiver	Power
Input Select	AV
DVD/LD	Shift + 1
TV/SAT	Shift + 5
DVR/VCR	Shift + 2
CD	Shift + 4
CD-R/Tape	Shift + 6
TUNER	Shift + 3
Standard	Red
Advanced	Green
Stereo	Yellow
Midnight /	Blue
CH. Select	Smart
Level-	Ch -
Level+	Ch +
Test Tone	Media
Effect -	Shift + Down

Original	Substituto
Effect +	Shift + Up
FL Dimmer	D. Menu
Mute	Mute
Master Volume-	Vol -
Master	Vol +
Up/Tune+	Up
Menu	Menu
Left/ST-	Left
Enter	Ok
Right/ST+	Right
Setup	Options
Down/Tune-	Down
Sleep	Sleep
Guide	Guide
<<	<<
Play	Play
>>/A	>>



 


 









Original	Substituto	Original	Substituto
 Power Source	 Power	 1	 1
 DVD	 Smart	 2	 2
 Top Menu	 Ch +	 3	 3
 Up	 Up	 Enter	 Pre Ch
 Menu	 Ch -	 4	 4
 Left	 Left	 5	 5
 Enter	 Ok	 6	 6
 Right	 Right	 +10	 Guide
 Audio	 Dual	 7	 7
 Down	 Down	 8	 8
 <<	 <<	 9	 9
 Play	 Play	 0	 0
 >>	 >>		
 I<<	 I<<		
 Pause	 Pause		
 Stop	 Stop		
 >>I	 >>I		





Original	Substituto	Original	Substituto
 Power Source	 Power	 5	 5
 Tuner	 Smart	 6	 6
 Tune+	 Up	 7	 7
 Menu	 Menu	 8	 8
 ST-	 Left	 9	 9
 Enter	 Ok	 0	 0
 ST+	 Right		
 Tune-	 Down		
 Band	 Stop		
 Display	 Back		
 Class	 Pause		
 MPX	 I<<		
 D.Access	 >>I		
 1	 1		
 2	 2		
 3	 3		
 4	 4		

