



Original	Substituto
Standby/On	Power
Open/Close	Eject / Surround
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
DVD/USB	AV / Input / RDS
DVD/USB	Shift + 8
DVD/USB	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Substituto
0	0
Clear	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Menu	Smart / List
Menu	Shift + Menu /
Home Menu	Menu / Home
Return	Back / Return
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
<</>Tune-	<< / Tune-
Play	Play / Slow
>>/>Tune+	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze



