 


 
 
 
 



 



 


 

 






 

 
 


 
 
 





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Recall / S.Page		Back
	Index / PVR List		Smart
	Reveal / Rec		Rec
	Zoom / T.Shift		Eject
	Hold / Guide		Guide
	Hold / Guide		Shift + Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol +		Vol +
	Vol -		Vol -
	I - II		Dual
	Source		AV
	Freeze		Shift + Pause
	CH +		Ch +
	CH -		Ch -
	Sleep		Sleep
	Menu		Menu
	DTV / Radio		TV/R
	Exit		Exit





Original	Substituto
 Aspect	 Format
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Media	 Media
 Info	 Info
 Subtitle	 Subt
 Play / Pause	 Play
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Original	Substituto
 >>	 >>
 Slow / FAV	 Pre Ch
 Repeat / Fav +	 Shift + Up
 Repeat / Fav +	 Shift + Text
 A-B / Fav -	 Shift + Down
 A-B / Fav -	 Shift + Back

