

 
 


 




 


 

 

 

 

 
 

 

 








 
 


 

 
 
 
 




 


 





 
 

 

 


 




Original	Substituto	Original	Substituto
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Reveal	 Smart	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Info	 +  Shift + Info	Chan.Down	 Ch -
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide

 


 




 
 




Original	Substituto	Original	Substituto
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Tone+		Media	



Original	Substituto	Original	Substituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substituto	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
On/Off	 + 	Shift + Power
Rotate Text	 + 	Shift + Mute
Audio-	 + 	Shift + Vol -
On/Tim		Rec
Off/Tim	 + 	Shift + Rec
Tone+		>>
Color+ P.Std	 + 	Shift + Format
Tone-		<<

Original	Substituto	
Audio+	 + 	Shift + Vol +
Bright+ Mode		>>>
Mix Scan	 + 	Shift + TV/R
Store Text	 + 	Shift + Text
Game Coo	 + 	Shift + Eject
AV 2	 + 	Shift + AV
Disp		3D
Search	 + 	Shift + Up
Store	 + 	Shift + Smart
Browse		Smart
Bright- Sys		<<<
Output	 + 	Shift + Media
Input		Media
Tune-	 + 	Shift + Left
Aft/Caf	 + 	Shift + Ok
Tune+	 + 	Shift + Right
Color- S.Std	 + 	Shift + Dual



Original	Substituto
Contrast+	SHIFT + CH+ Shift + Ch +
Contrast-	SHIFT + CH- Shift + Ch -
On Pip	SHIFT + 1 Shift + 1
Clear	SHIFT + CLEAR/EXIT Shift + Exit
Swap	SHIFT + 2 Shift + 2
Rotate Pip	SHIFT + 3 Shift + 3
Still	SHIFT + 4 Shift + 4
Dim Pip	SHIFT + 5 Shift + 5
Help	SHIFT + 6 Shift + 6
Camera	SHIFT + 7 Shift + 7
Camera1	SHIFT + 8 Shift + 8
3.*	SHIFT + GUIDE Shift + Guide
View	SHIFT + 0 Shift + 0
4.# 16:9	PICTURE FORMAT Format
Surround	SHIFT + A Shift + Red
Nicam/Mono	SHIFT + B Shift + Green
Level L	SHIFT + C Shift + Yellow

Original	Substituto
Level R/Woofer	SHIFT + D Shift + Blue

