



 









 

 

 





 

 

 
 


Original	Substituto	Original	Substituto
 Power	 Power	 CEC	CEC
 1	 1	 ?	?
 2	 2	 EXIT	Exit
 3	 3	 MENU	Menu
 4	 4	 Up	Up
 5	 5	 BACK	Back / Return
 6	 6	 Left	Left
 7	 7	 OK	OK
 8	 8	 Right	Right
 9	 9	 Down	Down
 FAV	 Fav / Marker / PC	 GUIDE	Guide
 0	 0	 TOOLS	Tools
 TXT	 Text / Goto	 Vol+	Vol+
 Red	 Red / Netflix / Search	 Source	AV / Input / RDS
 Green	 Green / APP / Repeat	 PR+	CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	Vol-
 Blue	 Blue / Prime Video / Random	 Mute	Mute / Dimmer

Original	Substituto	Original	Substituto
 Smart / List	 Smart / List	 TV	TV
 D.Menu / Top	 D.Menu / Top	 DVD	DVD
 Exit / Cancel / Clear	 Exit / Cancel / Clear	 SAT	SAT
 Menu / Home	 Menu / Home	 AUX	AUX
 Up	 Up	 SLOW	SLOW
 Back / Return	 Back / Return	 STEP-FREEZE	STEP-FREEZE
 Left	 Left	 HOLD	HOLD
 OK	 OK	 REC MODE	REC MODE
 Right	 Right	 TUNE-	TUNE-
 Down	 Down	 TUNE+	TUNE+
 Guide / EPG / -/-	 Guide / EPG / -/-	 PRESET-	PRESET-
 Vol+	 Vol+	 PRESET+	PRESET+
 Source	 Source	 TITLE	TITLE
 PR+	 PR+	 LANG UI	LANG UI
 Vol-	 Vol-	 EQ	EQ
 Mute / Dimmer	 Mute / Dimmer	 SURROUND	SURROUND





Original	Substituto	Original	Substituto
 PR-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 [<>]	 Picture / Format		
 Dialog	 Audio / Lang I/II		
 [...]	 Subtitle / EQ		
 Tv/Radio	 TV/Radio /		
 My Media	 Display / Media		

