 











 



 



 

















 

































Original	Substituto	Original	Substituto
 Standby	 Power	 Recall/+10	 Back / Return
 Eject	 Eject / Surround	 FAV/Program	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Display	 Display / Media
 Sleep	 Sleep / Timer	 D.Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red/Goto	 Red / Netflix / Search
 0/10	 0	 Green/A-B	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 Recall/+10	 Back / Return	 TV	 DVD
 FAV/Program	 Fav / Marker / PC	 SAT	 AUX
 Menu	 Menu / Home	 SLOW	 STEP-FREEZE
 Exit	 Exit / Cancel / Clear	 HOLD	 REC MODE
 Display	 Display / Media	 TUNE-	 TUNE+
 D.Setup	 Setup / OPT /	 PRESET-	 PRESET+
 Up	 Up	 EQ	 SURROUND
 Left	 Left	 SOUND	 AUDIO
 OK	 OK	 SUBTITLE	 TIMER
 Right	 Right	 PICTURE	 ZOOM
 Down	 Down	 TOP MENU	 OPT-TOOLS
 Vol-	 Vol-	 D.MENU	 SETUP
 Vol+	 Vol+	 HOME	 ANGLE
 CH-	 CH- / Page-	 MENU	 INFO
 CH+	 CH+ / Page+	 OK	 RETURN
 Red/Goto	 Red / Netflix / Search	 EXIT	 BACK
 Green/A-B	 Green / APP / Repeat	 CANCEL	 LIST





Original	Substituto
Yellow/Angle	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random
Play/Hold	Play / Slow
Pause	Pause / Step / Freeze
Stop/Reveal	Stop / Hold
Size/Aspect	Zoom / Size
Subtitle	Subtitle / EQ
<<	<< / Tune-
Text	Text / Goto
>>/Subpage	>> / Tune+
SCR/Title	+ Shift + Sound / Title
Slow/EPG	Guide / EPG / -/--
I<</Index	I<< / Preset-
>>I/Mix	>>I / Preset+
D.Menu	D.Menu / Top
I/II/Audio	Audio / Lang I/II
Media	+ Shift + Display / Media

Original	Substituto
Rec	Rec / Rec Mode
Timeshift	+ Shift + Sleep / Timer
Tv/Radio	TV/Radio /

