 

 
 

 
 





 
 
 
 
 



 
 

 
 


 



 
 




 



 





 



 









 

 




 




Original	Substituto	Original	Substituto
 Power	 Power	 Radio/+10	 Guide
 Mute	 Mute	 Recall/Program	 Back
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 Audio/I/II	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/DVD Setup	 Red
 0	 0	 Green/A-B	 Green

Original	Substituto	Original	Substituto
 Radio/+10	 Guide	 TV	 AUX
 Recall/Program	 Back	 DVD	 SAT
 Tv Menu	 Menu	 SLEEP	 OPT
 Exit	 Exit	 DUAL	 SUBT
 Goto/Text	 Text	 AD	 SETTINGS
 Display	 Info	 SOUND	 PICTURE
 Up	 Up	 REPEAT	 ECO
 Down	 Down	 ZOOM	 TIMER
 Right	 Right	 D.MENU	 AV
 Left	 Left	 MENU	 INFO
 OK/Enter	 Ok	 OK	 OK
 Vol+	 Vol +	 HOME	 SMART
 Vol-	 Vol -	 APP	 MEDIA
 P+	 Ch +	 CH +	 CH -
 P-	 Ch -	 1	 2
 Red/DVD Setup	 Red	 3	 4
 Green/A-B	 Green	 5	 6



