






 

 

 















 









 

 

 

 













 













 

 




Original	Substituto	Original	Substituto
 Standby	 Power	 TV/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Mute	 Mute
 9	 9	 EPG	 Guide
 0	 0	 Home	 Smart
 Fav	 Pre Ch	 Vol+	 Vol +
 Recall	 Back	 Vol-	 Vol -
 P.Mode	 Shift + Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH--	 Ch -
 Sleep	 Sleep	 Rec	 Rec

Original	Substituto	Original	Substituto
 TV/Radio	 TV/R	 TV	 AUX
 Display	 Info	 DVD	 SAT
 Up	 Up	 PLAY MODE	 REC MODE
 Left	 Left	 FF	 ■
 OK	 Ok	 SOUND	 AD
 Right	 Right	 LIST	 SUBT
 Down	 Down	 DUAL	 OPT
 Menu	 Menu	 PROG	 ECO
 Exit	 Exit	 SLEEP	 TV/R
 Mute	 Mute	 E-MANUAL	 REPEAT
 EPG	 Guide	 D.MENU	 ZOOM
 Home	 Smart	 TEXT	 TIMER
 Vol+	 Vol +	 TOP MENU	 INFO
 Vol-	 Vol -	 MENU	 OK
 CH+	 Ch +	 CLEAR	 BACK
 CH--	 Ch -	 EXIT	 HOME
 Rec	 Rec	 VOL+	 SMART
		 VOL-	 APP
		 CH+	 MEDIA
		CH-	CH-
		A	B
		C	D
		Mandis SHOP	www.mandis.tv



