







 
 


 



 



 







 



 







 



 



 



 











 







| Original   | Substituto  | Original   | Substituto   |
|--|---|--|--|
|  Internet   |  Smart / List          |  Sleep    |  Sleep / Timer      |
|  Power      |  Power                 |  1        |  1                  |
|  Rec        |  Rec / Rec Mode        |  2        |  2                  |
|  Play       |  Play / Slow           |  3        |  3                  |
|  Pause      |  Pause / Step / Freeze |  4        |  4                  |
|  Stop       |  Stop / Hold           |  5        |  5                  |
|  I<<        |  I<< / Preset-         |  6        |  6                  |
|  <<         |  << / Tune-            |  7        |  7                  |
|  >>         |  >> / Tune+            |  8        |  8                  |
|  >>I       |  >>I / Preset+        |  9       |  9                 |
|  Screen   |  Picture / Format    |  Source |  AV / Input / RDS |
|  Lang     |  Audio / Lang I/II   |  0      |  0                |
|  Subtitle |  Subtitle / EQ       |  Swap   |  D.Menu / Top     |
|  Presets  |  Setup / OPT /       |  Menu   |  Menu / Home      |
|  EPG      |  Guide / EPG / -/--  |  Mute   |  Mute / Dimmer    |
|  Text     |  Text / Goto         |  P+     |  CH+ / Page+      |
|  FAV      |  Fav / Marker / PC   |  Up     |  Up               |





| Original | Substituto | Original | Substituto                  |
|----------|------------|----------|-----------------------------|
|          | V+         |          | Vol+                        |
|          | Left       |          | Left                        |
|          | Ok         |          | OK                          |
|          | Right      |          | Right                       |
|          | P-         |          | CH- / Page-                 |
|          | Down       |          | Down                        |
|          | V-         |          | Vol-                        |
|          | Back       |          | Back / Return               |
|          | Exit       |          | Exit / Cancel / Clear       |
|          | Red        |          | Red / Netflix / Search      |
|          | Green      |          | Green / APP / Repeat        |
|          | Yellow     |          | Yellow / YouTube / Repeat   |
|          | Blue       |          | Blue / Prime Video / Random |
|          | Multimedia |          | Display / Media             |
|          | My Button1 |          | Eject / Surround            |
|          | My Button2 |          | TV/Radio /                  |
|          | Info       |          | Info / Angle                |

