







Original	Substituto	Original	Substituto
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	V-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	[G]		Guide / EPG / -/--
	i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Rakuten Tv		TV/Radio /
	twitch		Shift + Green / APP / Repeat





Original		Substituto		Original		Substituto	
	*1	 OPT-TOOLS SETUP	Setup / OPT /				
	Red	 NETFLIX SEARCH	Red / Netflix / Search				
	Green	 APP REPEAT	Green / APP / Repeat				
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat				
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random				
	<<	 TUNE- ◀	<< / Tune-				
	Pause	 STEP-FREEZE 	Pause / Step / Freeze				
	>>	 TUNE+ ▶	>> / Tune+				
	Rec	 REC MODE ●	Rec / Rec Mode				
	Play	 SLOW ▶	Play / Slow				
	Stop	 HOLD ■	Stop / Hold				

