



 



 



 

 



 

 



 



 











































Original	Substituto	Original	Substituto
 Power	 Power	 Down	 Down
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Picture	 Picture / Format	 1	 1
 Sound	 Sound / Title	 2	 2
 Aspect	 Shift + Picture / Format	 3	 3
 Sleep	 Sleep / Timer	 4	 4
 Subtitle	 Subtitle / EQ	 5	 5
 CH. List	 Smart / List	 6	 6
 EPG	 Guide / EPG / -/--	 7	 7
 FAV	 Fav / Marker / PC	 8	 8
 TV / Radio	 TV/Radio /	 9	 9
 Up	 Up	 0	 0
 Input	 AV / Input / RDS	 Recall	 Back / Return
 Left	 Left	 Info	 Info / Angle
 OK	 OK	 Vol +	 Vol+
 Right	 Right	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Rec. List	 Display / Media





Original	Substituto	Original	Substituto
	CH +		CH+ / Page+
	Vol -		Vol-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV / TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Eject / Surround
	Nicam / A2		Audio / Lang I/II
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	I<< / Size		I<< / Preset-

