



| Original | Substituto | Original | Substituto |
|--|---|---|--|
|  Power |  Power |  8 |  8 |
|  Open / Close |  Eject |  9 |  9 |
|  TV / DTV |  TV/R |  +/- |  Shift + Guide |
|  Line |  AV |  0 |  0 |
|  DVD |  Media |  PRE |  Pre Ch |
|  TTX |  Text |  Vol + |  Vol + |
|  PIP ON / OFF |  Shift + Power |  Vol - |  Vol - |
|  PIP Swap |  Shift + Back |  Prog + |  Ch + |
|  PIP Source |  Shift + AV |  Prog - |  Ch - |
|  PIP Sound |  Shift + Dual |  M/S |  Subt |
|  1 |  1 |  Still |  Shift + Pause |
|  2 |  2 |  Sleep |  Sleep |
|  3 |  3 |  TV Menu |  Menu |
|  4 |  4 |  P.STD |  Format |
|  5 |  5 |  S.STD |  Shift + Subt |
|  6 |  6 |  P.Size |  Shift + Format |
|  7 |  7 |  Exit / Cancel |  Exit |





| Original | Substituto |
|----------|--------------------|
| | Up |
| | Right |
| | Down |
| | Left |
| | OK |
| | MUTE |
| | SHIFT + INFO |
| | STOP |
| | PLAY MODE |
| | PAUSE |
| | Fast backward |
| | Fast forward |
| | Single left arrow |
| | Single right arrow |
| | Red |
| | Green |
| | Yellow |

| Original | Substituto |
|----------|-----------------------|
| | Blue |
| | SHIFT + REPEAT |
| | SHIFT + SEARCH TV/R |
| | SOUND DUAL |
| | ECO 3D |
| | RETURN BACK |
| | SHIFT + TOP MENU MENU |
| | DISC NAV LIST |
| | SETTINGS OPT |
| | GUIDE |
| | SHIFT + CLEAR EXIT |
| | DISPLAY INFO |

