 
 
 

 


 

 

 

 

 

 

 

 

 

 

 





 




Original	Substituto
 Power	 Power
 Mute	 Mute
 Sleep	 Sleep
 Nicam/A2	 Dual
 Still	 Pause
 16:9	 Format
 NR.	 Options
 Surround	 List
 Picture	 Shift + Format
 Tv/Av	 AV
 Display	 Info
 Sound	 Shift + Dual
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 Right	 Right

Original	Substituto
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Red	 Red





Original	Substituto
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue
 Index	 D. Menu
 Cancel	 Exit
 Subpage	 Subt
 Size	 Eject
 Hold	 Stop
 Reveal	 Menu
 PIP Window	 Shift + Media
 PIP Position	 Shift + Smart
 PIP Swap	 Smart
 TXT/CC	 Text
 PIP Size	 Media
 PIP On/Off	 Shift + Power

Original	Substituto

