 




 
 
 

 

 
 
 



 



 





















 

 










 
 



 












Original	Substituto	Original	Substituto
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 PLAY	 PLAY	 PAUSE	 PAUSE
 STOP	 STOP	 STOP	 STOP
 RECORD	 RECORD	 RECORD	 RECORD
 INDEX	 INDEX	 INDEX	 INDEX
 HOLD	 HOLD	 HOLD	 HOLD
 SIZE	 SIZE	 SIZE	 SIZE
 REVEAL	 REVEAL	 REVEAL	 REVEAL
 CANCEL	 CLEAR EXIT	CLEAR EXIT	CLEAR EXIT
MENU	TOP MENU MENU	TOP MENU MENU	TOP MENU MENU
DTV/RADIO	SEARCH TV/R	SEARCH TV/R	SEARCH TV/R
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
UP	UP	UP	UP
DOWN	DOWN	DOWN	DOWN
RIGHT	RIGHT	RIGHT	RIGHT




 

 

 



 





 
 



 
 

Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substituto
	



 




 



 



Original	Substituto	Original	Substituto
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Substituto	Original	Substituto
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Substituto	Original	Substituto
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

