











 
 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		Shift + AV / Input / RDS
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	MTS		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Rec List/D.Setup		Setup / OPT /
	Rec List/D.Setup		Smart / List
	CH-		CH- / Page-
	Rec		Rec / Rec Mode





Original	Substituto	Original	Substituto
Open/Close	Eject / Surround	D.Menu/Reveal	D.Menu / Top
Play	Play / Slow	Size/D.Title	Shift + Sound / Title
Pause/Timeshift	Pause / Step / Freeze	Size/D.Title	Shift + Zoom /
Stop/Freeze	Stop / Hold	Goto/Hold	Shift + Stop /
<<<	<<< / Tune-	Goto/Hold	Shift + Text /
Guide	Guide / EPG / -/--	Text/D.Display	Shift + Display / Media
>>>	>>> / Tune+	Text/D.Display	Text / Goto
Aspect	Shift + Picture / Format	Red/Prog	Shift + TV/Radio / Program
I<<<	I<<< / Preset-	Red/Prog	Red / Netflix / Search
Tv/Radio	TV/Radio /	Green/Step	Shift + Pause / Step /
>>>I	>>>I / Preset+	Green/Step	Green / APP / Repeat
FAV List	Fav / Marker / PC	Yellow/Repeat	Yellow / YouTube / Repeat
Zoom/Index	Zoom / Size	Yellow/Repeat	Shift + Green / APP /
Angle/Cancel	Shift + Exit / Cancel / Clear	Cyan/A-B	Blue / Prime Video / Random
Angle/Cancel	Info / Angle	Cyan/A-B	Shift + Yellow / YouTube /
Audio/Subpage	Audio / Lang I/II		
Subtitle	Subtitle / EQ		

