







 
 
















 











Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Substituto
 Recall	 Back / Return
 Display	 Display / Media
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Open/Close	 Eject / Surround





Original	Substituto	Original	Substituto
 Subtitle	 Subtitle / EQ	 Red/D.Set	 Red / Netflix / Search
 CH List	 Smart / List	 Green/D.Menu	 Green / APP / Repeat
 Rec	 Rec / Rec Mode	 Yellow/D.Sub	 Yellow / YouTube / Repeat
 Rec List	 D.Menu / Top	 Blue/D.Lan	 Blue / Prime Video / Random
 Tv/TXT/D.Pro	 Text / Goto		
 Cancel/D.Rep	 Shift + Exit / Cancel / Clear		
 Reveal/D.Goto	 Setup / OPT /		
 Nicam/D.Slow	 Audio / Lang I/II		
 I<</Index	 I<< / Preset-		
 >>I/Hold	 >>I / Preset+		
 Size/D.Zoom	 Zoom / Size		
 Subpage/D.Title	 Info / Angle		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		

