



 

 

 

 



 

 

 

 











 







































Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Substituto	Original	Substituto
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Red	NETFLIX SEARCH	Red / Netflix / Search
	Green	APP REPEAT	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM	Blue / Prime Video / Random
GUIDE	<< / Guide	TUNE-	<< / Tune-
GUIDE	<< / Guide	GUIDE EPG	Guide / EPG / -/-
TIMESHIFT	Play/Pause / Timeshift	SLOW	Play / Slow
ASPECT	>> / Aspect	TUNE+	>> / Tune+
CANCEL	<< / Cancel	PRESET-	<< / Preset-
SUB.PG	>> / Subpage	PRESET+	>> / Preset+
INDEX	Stop / Index	ANGLE INFO	Info / Angle
INDEX	Stop / Index	HOLD	Stop / Hold
TV/RADIO	TV / Radio	PROGRAM TV/ RADIO	TV/Radio /
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REVEAL	Reveal	OPT-TOOLS SETUP	Setup / OPT /
SIZE	Size	SIZE ZOOM	Zoom / Size

Original	Substituto	Original	Substituto
HOLD	Hold	SHIFT + HOLD	Shift + Stop /
TEXT	Text	GOTO TEXT	Text / Goto

