



Original	Substituto
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Original	Substituto
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/-
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





Original	Substituto	Original	Substituto
 MARK	 Fav / Marker / PC		
 ZOOM	 Zoom / Size		
 Vol-	 Vol-		
 A-B	 Yellow / YouTube / Repeat		
 Ripeti	 Back / Return		
 Slow	 Shift + Play /		
 <</F.RWD	 << / Tune-		
 F.FWD/>>	 >> / Tune+		
 I<< / Skip-	 I<< / Preset-		
 >>I / Skip+	 >>I / Preset+		
 Stop	 Stop / Hold		
 Pause/Step	 Pause / Step / Freeze		
 Play	 Play / Slow		

Original	Substituto	Original	Substituto

