





 

 






 

 

 





 

 










Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV / TV		TV/R
	Menu		Menu
	TXT		Text
	PR +		Ch +

Original	Substituto	Original	Substituto
	PR +		Up
	PR -		Ch -
	PR -		Down
	Vol +		Vol +
	Vol +		Right
	Vol -		Vol -
	Vol -		Left
	OK		Ok
	SWAP		Back
	16:9		Format
	White / i		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Reveal		Smart





Original		Substituto		Original		Substituto	
	Double		Media				
	SUB		Subt				
	MIX	+	Shift + Text				
	Update		Eject				

