 



 



 



 

 
 
 



 



 







 



 



 



 



 



 



















Original	Substituto	Original	Substituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Back	 Back / Return
 4	 4	 Menu	 Menu / Home
 5	 5	 NETFLIX	 Shift + Red / Netflix /
 6	 6	 YouTube	 Shift + Yellow / YouTube /
 7	 7	 prime video	 Shift + Blue / Prime
 8	 8	 Google Play	 Shift + Green / APP /
 9	 9	 Vol+	 Vol+
 Info	 Info / Angle	 Google Assistant	 Smart / List
 0	 0	 P+	 CH+ / Page+
 EPG	 Guide / EPG / -/--	 Vol-	 Vol-
 Settings	 Setup / OPT /	 Home	 D.Menu / Top
 Input	 AV / Input / RDS	 Home	 Display / Media
 Up	 Up	 P-	 CH- / Page-



