



Original	Substituto	Original	Substituto
TV	Smart / List	Green	Green / APP / Repeat
DTV	Display / Media	Yellow	Yellow / YouTube / Repeat
Norm	Setup / OPT /	Blue	Blue / Prime Video / Random
Audio 1	Audio / Lang I/II	Sound	Sound / Title
TV Menu	Menu / Home	Text	Text / Goto
Brightness	Zoom / Size	Right	Right
0	0	AV	AV / Input / RDS
1	1	Aspect	Picture / Format
2	2	Video	Shift + 4
3	3	Guide	Guide / EPG / -/--
4	4	Up	Up
5	5	Left	Left
6	6	OK	OK
7	7	Power	Power
8	8	Down	Down
9	9	Back	Back / Return
Red	Red / Netflix / Search	Exit	Exit / Cancel / Clear

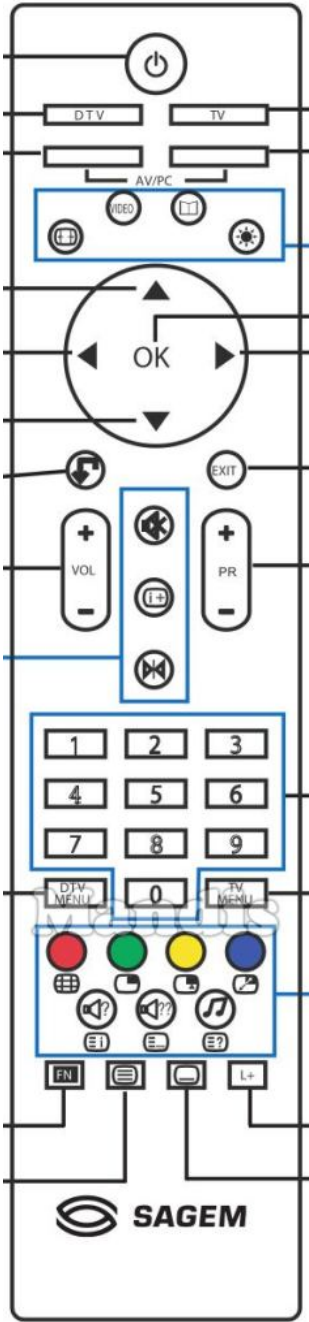







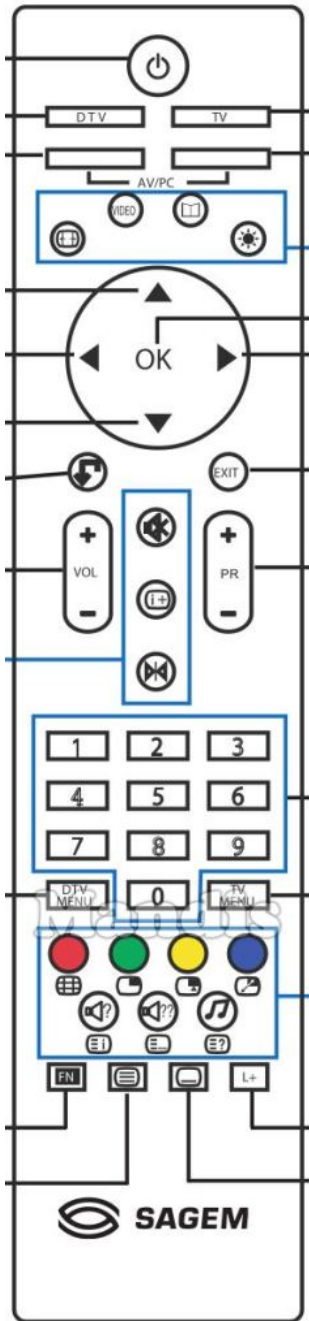














 




















 

















 









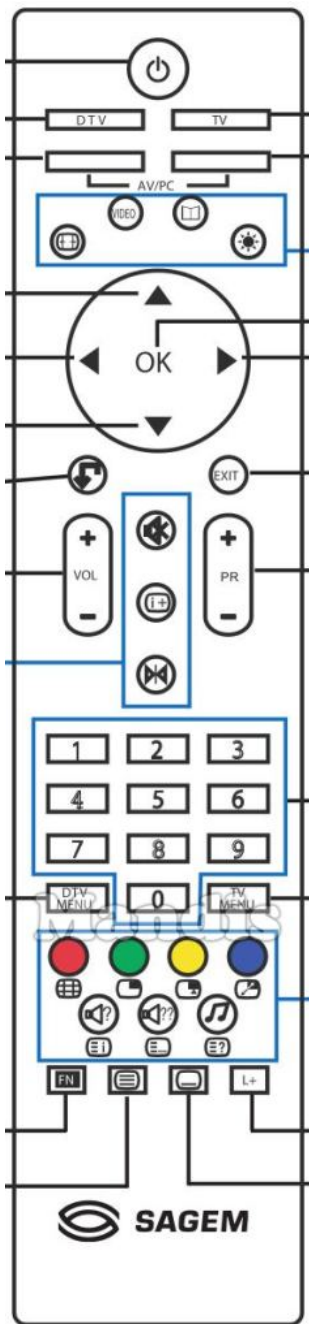
Original	Substituto	Original	Substituto
	Vol+		
	Vol-		
	Mute / Dimmer		
	CH+ / Page+		
	CH- / Page-		

















Original	Substituto	Original	Substituto
	Power		Power
	DTV		Display / Media
	TV		Smart / List
	AV		AV / Input / RDS
	Video		Shift + 4
	Guide		Guide / EPG / -/--
	Aspect		Picture / Format
	Brightness		Zoom / Size
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Norm		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV Menu		Menu / Home
	DTV Menu		D.Menu / Top
	0		0
	Red		Red / Netflix / Search





	Original	Substituto	Original	Substituto
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Audio 1	 Audio / Lang I/II		
	Sound	 Sound / Title		
	Text	 Text / Goto		

